

PARTS LIST


BHT600DR

CONTENTS

1.MAIN BODY.....	1~3
2.GEARCASE, CYLINDER.....	4~6
3.RECOIL STARTER.....	7~8
4.ACCESSORIES.....	9




1. BHT600DR MAIN BODY

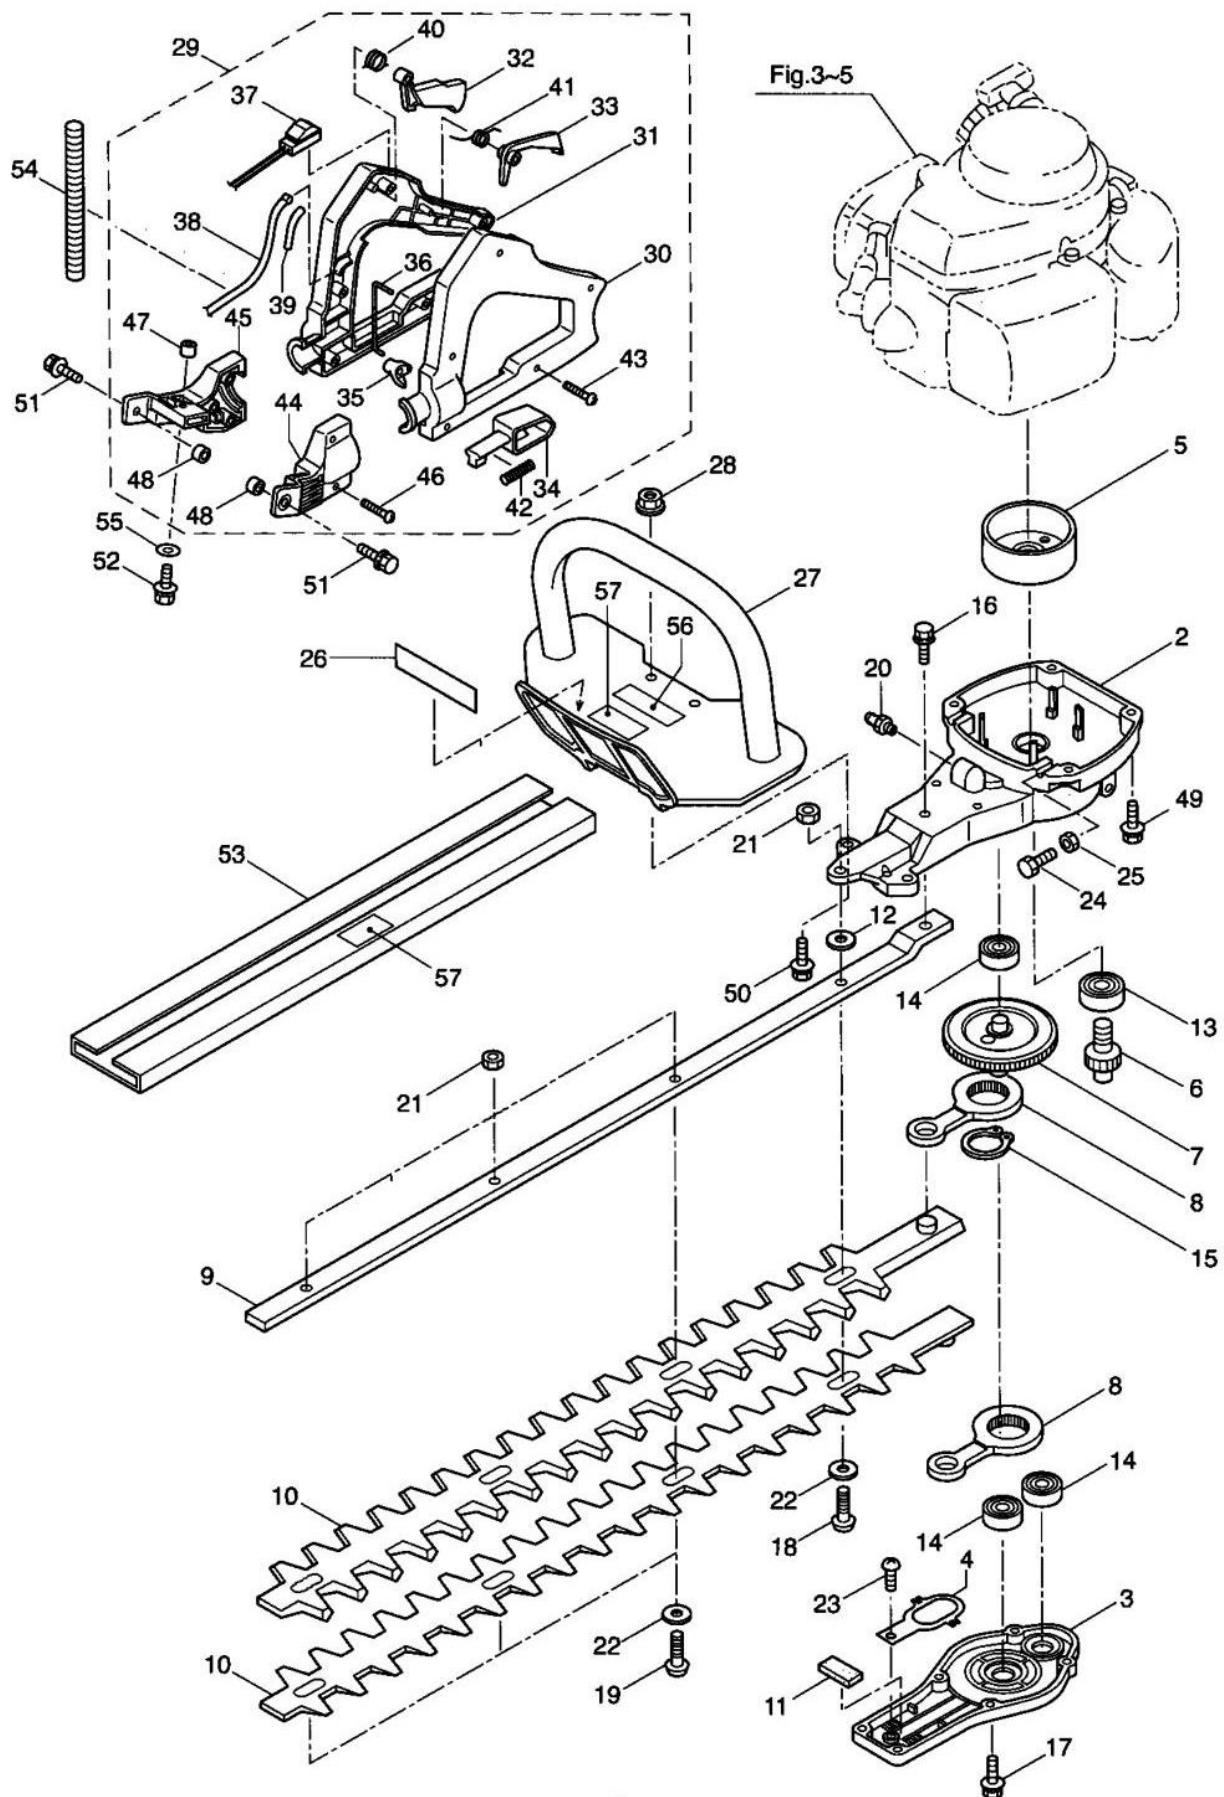

Status	Position	Parts Number	substitute Number	Parts name	Unit Quantity	Set Unit Quantity	Remarks
	1	362200		BHT600DR	1		
	2	271222		CASE	1		
	3	271223		LOOSE	1		
	4	271224		PLATE	1		
	5	270021		CRAFT DRUM	1		136-145
	6	271410		PINIONIA	1		
	7	270552		CRANK COMPLET	1		A286-103004
	8	271225		LORD	2		TE1-A063000
	9	271226		GUIDE PLATE	1		TE1-A064000
	10	270682		BLADE	2		
	11	271227		FELT	1		TE1-A067000
	12	271296		WASHER	1	10	
	13	580767		BEARING 6001 2RS	1		
	14	270423		BEARING(#608ZZ)	3		
	15	580777		C-RING(26)	1	5	
	16	271228		SCREW	1	5	M5
	17	580791		SCREW(M5X16)	6	5	M5
	18	271229		SCREW	1		G040-005000
	19	991914		SCREW	3		A040-002009
	20	991937	069553	GREASE NIPPLE	1		A-MT6X1
	21	991941	290560	U-NUT	4	5	M6
	22	991913		WASHER	4	10	
	23	991924		SCREW(M3X5)	1	10	M3
	24	271230		SCREW	2		
	25	271231		NUT	2		K150-050000
	26	270088		LABEL	1		A052-152004
	27	270241		FRONT HANDLE	1		
	28	991941	290560	U-NUT	2	5	M6
	29	271217		REAR HANDLE ASSY	1		TE2-1015000
	30	271278		REAR HANDLE L	1		
	31	271279		REAR HANDLE R	1		TE2-1015020
	32	271280		SLOT LEVER	1		TE2-1010030
	33	271281		SLOT LEVER	1		TE2-1010040
	34	271282		LOCK LEVER	1		
	35	271283		LOCK LEVER STOP	1		TE2-1013020
	36	271284		LORD	1		
	37	271285		SWITCH	1		G014-222004
	38	271286		CABLE COMPLETE	1		
	39	271287		SPACER	1		
	40	271288		SPRING	1		
	41	271289		SPRING	1		G003-000040
	42	270400		SPRING	1		
	43	271276		SCREW	5		
	44	271274		HANDLE STATE L	1		
	45	271275		HANDLE STATE R	1		
	46	271276		SCREW	3		
	47	270424		SPACER	1		
	48	271277		SPACER	2		

Status	Position	Parts Number	substitute Number	Parts name	Unit Quantity	Set Unit Quantity	Remarks
	49	271425		SCREW	4		K056-050160
	50	270705		SCREW	2	5	
	51	271219		SCREW	2		K055-050205
	52	271220		SCREW	1		K055-060225
	53	217677		BLADE COVER	1		
	54	271221		TUBE	1		
	55	270843		WASHER	1		25X6XT1.6
	56	270696		LABEL	1		G052-100060
	57	270087		LABEL	2		A052-154004

2. BHT600DR ENGINE GEARCASE, CYLINDER

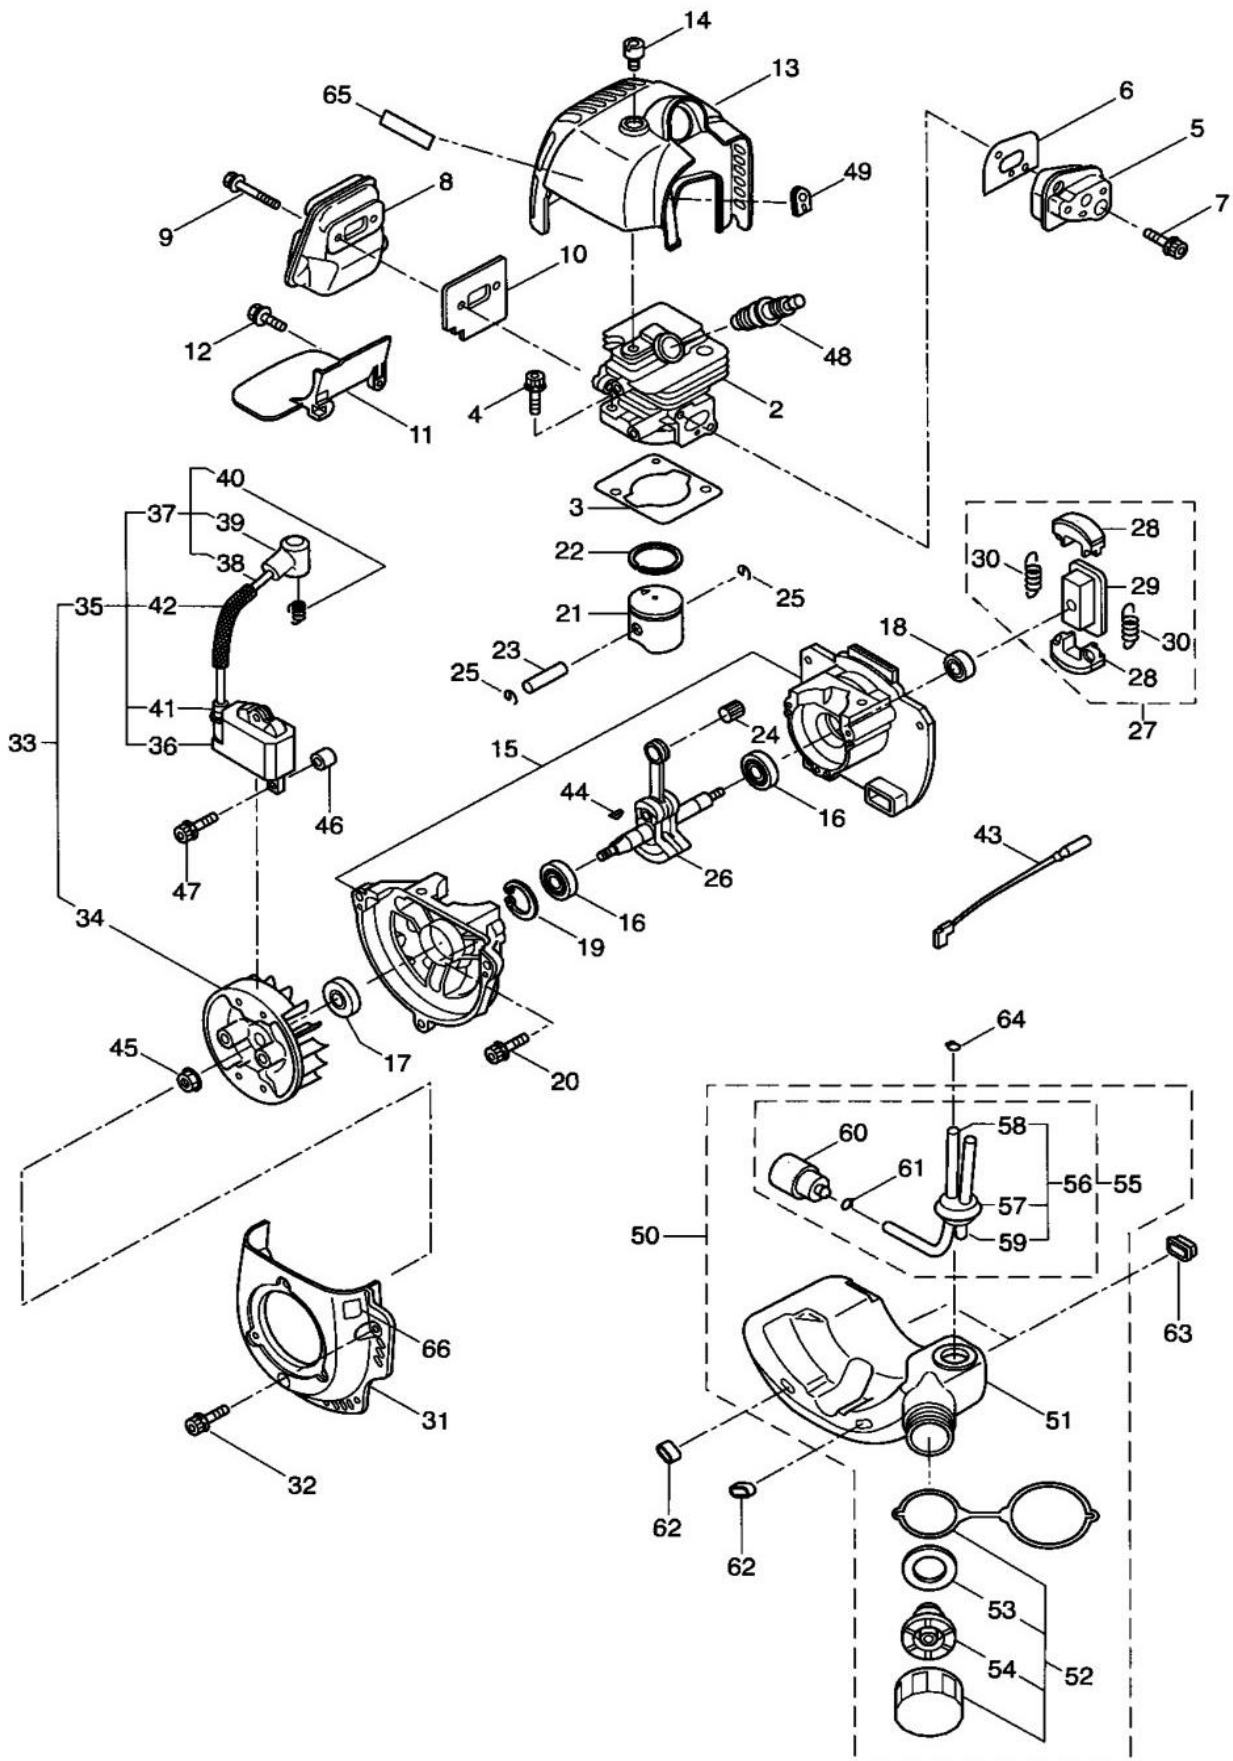


Status	Position	Parts Number	substitute Number	Parts name	Unit Quantity	Set Unit Quantity	Remarks
	1	858165		HE230/02	1		
	2	283149		CYLINDER	1		
	3	283177		GASKET	1		
	4	267290		SCREW	2	5	M5X20WSW
	5	265802		INSULATOR	1		
	6	267049		GASKET	1	5	
	7	265924		SCREW	2	5	M5X25WSW
	8	283192		MUFFLER ASSY	1		
	9	264223		BOLT	2	5	M5X40
	10	283176		GASKET	1		
	11	283175		UNDER COVER	1		
	12	261607		BOLT	1	5	M5X16WSW
	13	283161		TOP COVER	1		
	14	265742	286399	BOLT	1		M5
	15	283150		CRANKCASE	1		HE230
	16	261181		BEARING	2		6000C3
	17	262712	261030	OIL SEAL	1		TC10267
	18	262713	261120	OIL SEAL	1		TC10207
	19	054676		RING SNAP <M26>	1	5	7ナ3726
	20	261246		BOLT	3	5	M5X25
	21	283265		PISTON	1		
	22	263789		PISTON RING	1		
	23	281185		PISTON PIN	1		5.9X8X25.5L
	24	261037		NEEDLE BEARING	1		
	25	261576		CLIP PISTON	2		
	26	283155		CRANKSHAFT COMPLETE	1		
	27	280404		CLUTCH ASSY	1		
	28	280568		CRAFT	2		
	29	280569		CRAFT BOX	1		
	30	280570		SPRING	2		
	31	283160		FAN COVER	1		
	32	261250		BOLT	3	5	M5X20
	33	283163		MAGNET ASSEMBLY	1		
	34	283164		ROTOR	1		
	35	283165		IGNITION COIL ASSY	1		MH-1A
	36	283267		COIL	1		
	37	283268		CODE ASSY	1		94-1059
	38	283269		CODE	1		94-997
	39	283178		PLUG KEY	1		
△	40	283270		HOOK	1		
	41	283271		KEEP	1		
	42	283272		TUBE	1		17-534
	43	269722		LEAD	1		165ハ7HCBH
	44	261076		HANGY KEY	1	5	A71 3X10
	45	261077		NUT	1	5	M6
	46	280381		SPACER	2	5	
	47	281211		SCREW	2	5	M4X20WSW
	48	264652	571421	SPARK PLUG	1		CJ8Y

Status	Position	Parts Number	substitute Number	Parts name	Unit Quantity	Set Unit Quantity	Remarks
	49	283140		GROMMET	1		
	50	283437		TANK ASSY	1		
	51	283162		FINAL TANK	1		400CC
	52	283438		TANK KEY ASSY	1		
	53	283727		PAKIN	1	5	
	54	283764		BREATHER	1		
	55	265752		BREATHER ASSY	1		
	56	264031		PIPE SIZE	1		
	57	261115		GROMMET	1		
	58	261690		PUMP	1		3X5X160L
	59	263038		OVERFLOW PIPE	1		3X6X85
	60	264653		FINAL FILTER ASSY	1		125-552
	61	261117		CLIP	1		
	62	264318		PAD	2		
	63	261118		PAD	2		
	64	261117		CLIP	1		
	65	269705		LABEL	1		
△	66	269824		LABEL	1		


3. BHT600DR
RECOIL STARTER

ENGINE

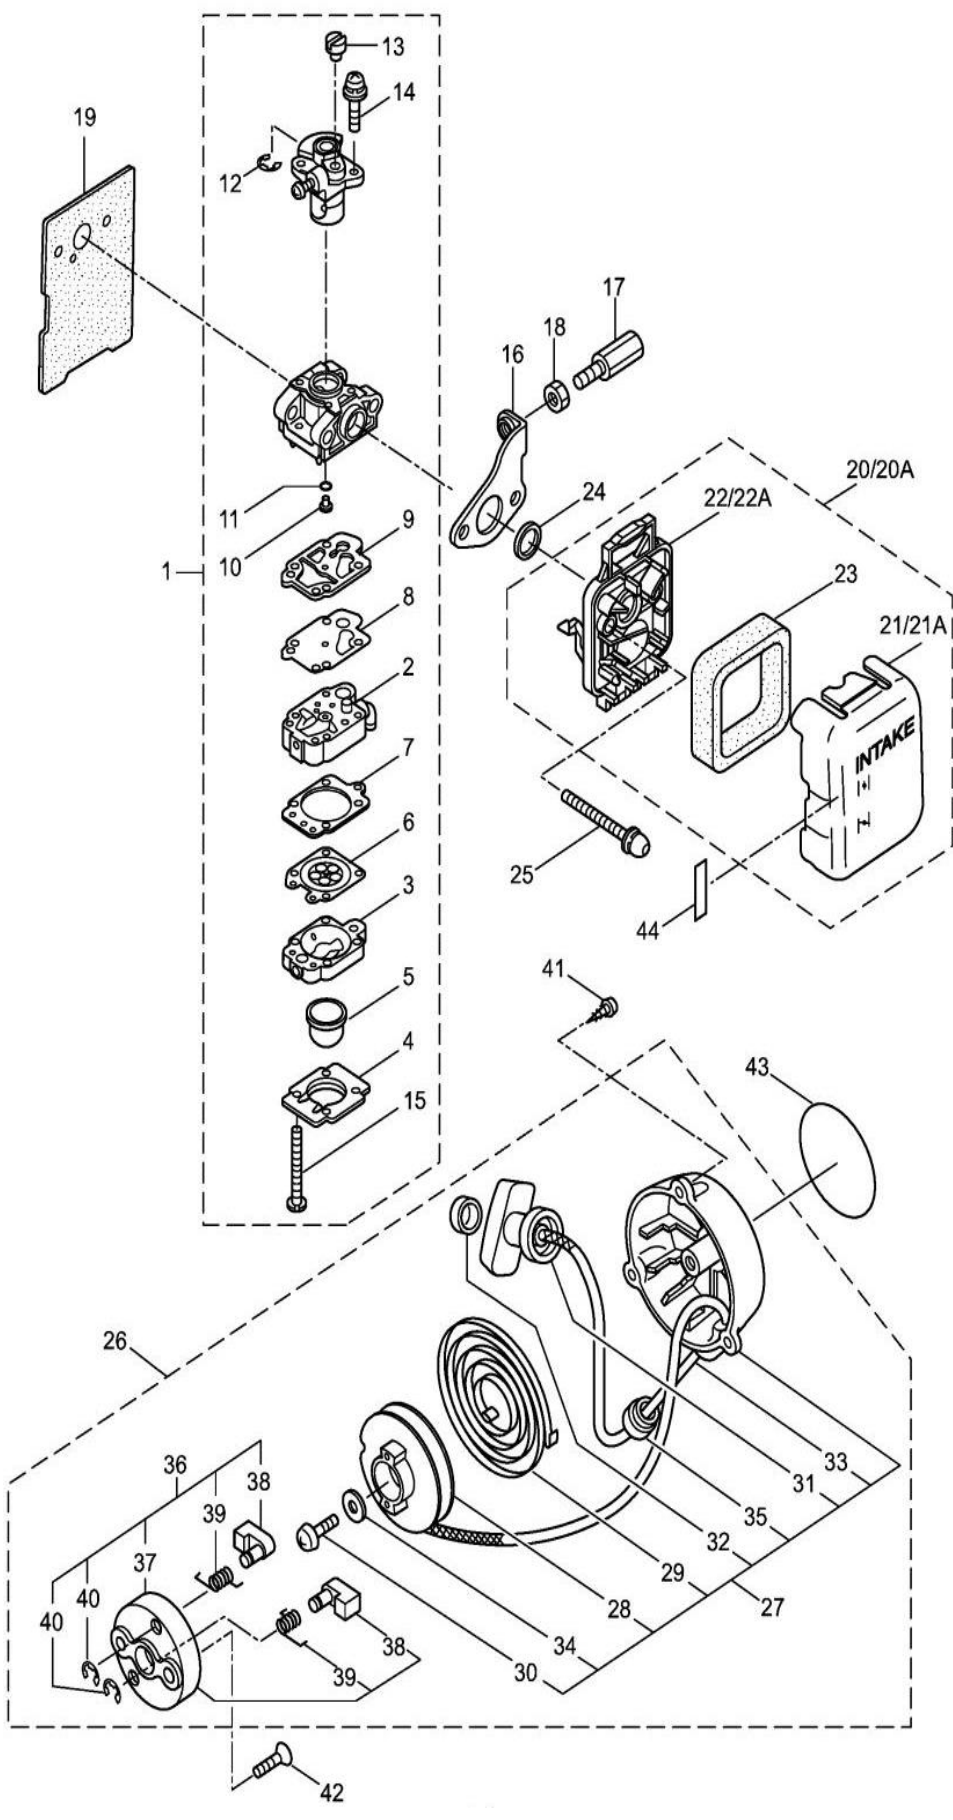

Status	Position	Parts Number	substitute Number	Parts name	Unit Quantity	Set Unit Quantity	Remarks
	1	283436		KEYLET ASSEMBLY	1		WYL-243B
	2	264155		PUMP BODY	1		
	3	262991		PAGE BODY	1		WB5-2557
	4	262992		PUMP COVER	1		WB21-3147
	5	261874		PRIMER	1		
	6	268501	283905	DIAPHRAGM	1		
	7	262993		GASKET	1		WB92-359
	8	262994		DIAPHRAGM	1		WB95-99
	9	282576		GASKET	1		WB92-415
	10	281487		JET	1		
	11	261871		O-RING	1		WB16-104
	12	261876		RING	1		WB16-71
	13	261658		SWIVEL	1		WB52-34
	14	264682		SCREW	2		WB96-364
	15	262996		SCREW	4	5	WB96-425
	16	268535		STATE	1		
	17	265410		SCREW	1		
	18	261878		NUT	1	5	M6 3/1
	19	283181		GASKET	1		
	20	264708		CLEANER ASSEMBLY	1		CAA-31(1.5)
	20A	278184		CLEANER ASSEMBLY	1		
	21	264709	277554	CLEANER COVER	1		AIR FILTER
	21A	277554		CLEANER COVER	1		AIR FILTER
	22	264693		CASE ASSEMBLY	1		WB181-629
	22A	278185		CASE BODY ASSY			
	23	264695		ELEMENT	1		WB125-62
	24	268963		PAKIN	1	5	
	25	269834		SCREW	2	5	M5X60WSW
	26	283169		RECOIL STARTER ASSY	1		
	27	283170		STARTER ASSY	1		
	28	280492		REEL	1		
	29	280493	287421	SPIRAL SPRING	1		T0.4
	30	280494		SET SCREEN	1		
	31	280497		STARTER TUBE	1		
	32	280550		STOPPER	1		
	33	283616		STARTER ROPE	1		
	34	280547		WASHER	1	10	
	35	280548		COLLAR	1		
	36	280532		PURI ASSY	1		
	37	280533		PURI	1		
	38	269699		RATCHET	2		
	39	280553		SPRING	2		
	40	020299		E-RING #4	2	10	3E ⁺ 4
	41	280144		TAPPING SCREW	3	5	4X16
	42	264535		SCREW	2	5	M6X20
	43	283622		LABEL	1		BHT600DR
	44	281007		LABEL	1		フヨ-クカイハイ

4. BHT600DR ACCESSORIES

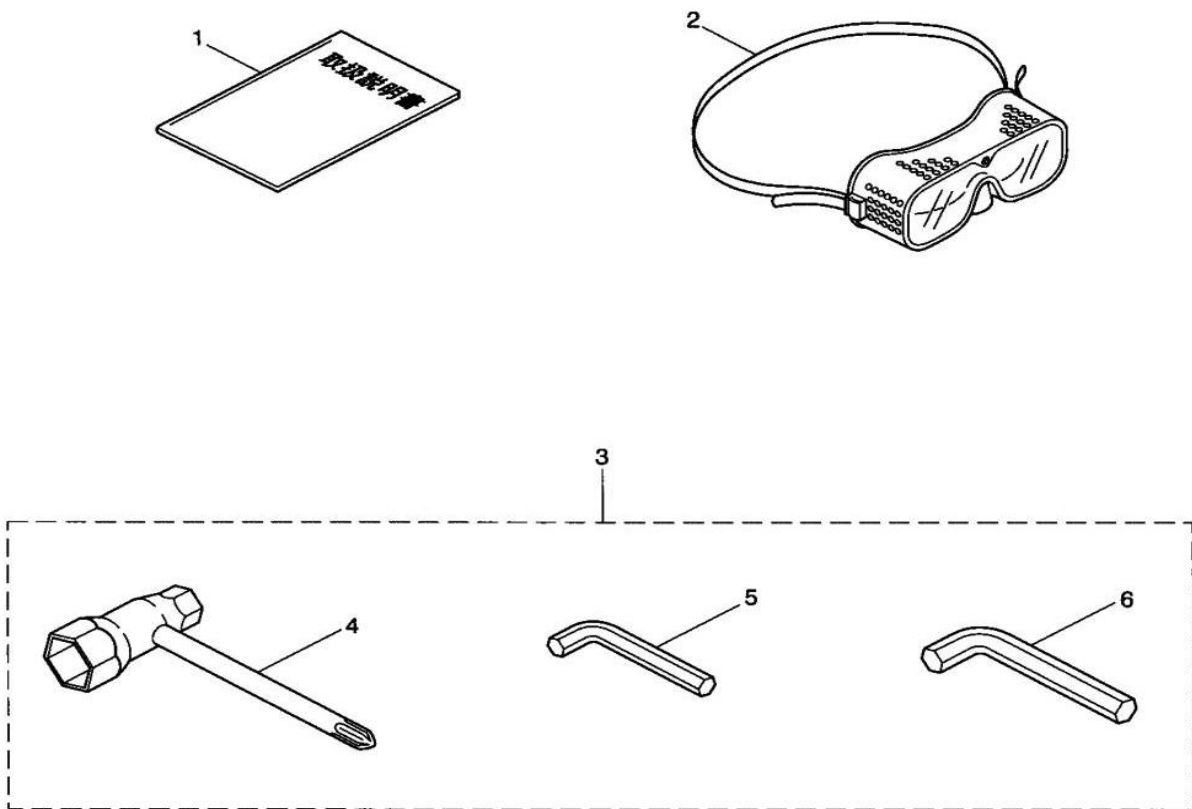

Status	Position	Parts Number	substitute Number	Parts name	Unit Quantity	Set Unit Quantity	Remarks
	1	271299		OPERATION MANUAL	1		BHT600DR
	2	221460		GOGGLES	1		HS2008-C
	3	264606		TOOL SET	1		
×	4	(264607)		PLUG WRENCH	1		
	5	219431		SPANNER	1		ニメンハバ ³
	6	219432		SPANNER	1		ニメンハバ ⁴