

1 E	Part Descriotion Buckle Plate	NO.	Part Descriotion
\vdash	Ruckle Plate		
		41	Wrench
	Spring	42	Wrench
	Long hook base	43	Shim
	Parallel Stop	44	Basement
	Eccentric lever Cover	45	Dam board
6 E	Eccentric lever Seat	46	Rack
7 E	Eccentric lever head	47	Screw 5*16
8 5	Spring pin 4*16	48	Screw 6*12
9 5	Screw ST4X20	49	Screw
10 E	Eccentric lever	50	Push stick
11 L	Long hook	51	Tool hook
12 5	Screw ST5X10	52	Screw ST4X16
13 5	Screw 6X12	53	Cable press plate A
14 5	Slider base	54	Screw ST4X16
15 N	Nut	55	Cable press plate B
16 F	Plastic pionter	56	Screw ST4X16
17 5	Slider	57	Swtch box
18 F	Plastic bracket	58	Protecter
19 5	Small stop rail	59	Screw on protecter
20 k	Knob cover	60	DZ-6 switch
21 k	Knob	61	Right saw blade guard
22 A	Angle stop	62	Left saw blade guard
23 8	Screw 5*10	63	Screw 6X30
24 T	Table insert	64	Movable protoctor guard
25 8	Screw ST5X10	65	Screw ST4X16
26 F	Pointer 1	66	Flat pad 4X22X1.5
27 (Groove	67	Protected guard
28 F	Round pin 5*12	68	Screw 8X16
29 T	Table with extension	70	Up pressing plate
30 5	Screw 6*12	71	Saw blade
31 5	Screw6	72	Down pressing plate
32 5	Screw 6*2	73	Screw M5X12
33 7	Table plate	74	Baffle
34 5	Scale plastic 1	75	Splitter
35 5	Scale	76	Screw 8X16
36	Scale 1	77	Press plate
37 (Connecting head	78	Screw M5X12
	Scale 2	79	Splitter base
39 5	Scale plastic 1	80	Big wheel
	M6 screw	81	Shaft base 1

No. Part Description No. Part Description				
83 Shaft rotor blade 123 Spring 84 Long shim 124 Plastic gear 85 M8 Nut 126 Hand wheel 86 Shaft 126 Hand wheel 2 87 Screw M5X12 127 Kinb cover 88 Dead plate 128 Leg 89 Bearing 608 129 Wheel frame 90 Output shaft 130 Rubber foot 91 Front cover 131 Screw 6X12 92 Bearing 6201 132 Screw 6X12 93 Gear box 133 Short guide rail 94 Big not 134 Nut 95 Screw ST6X55 135 Long guide rail 96 Stator 136 Long guide rail 97 Bearing 6202 14 Pack 98 Fan 14 Pack 100 Bearing 6200 14 Pack 101 Body 14 Pack	NO.	Part Descriotion	NO.	Part Descriotion
124 Plastic gear	\vdash			
85 M6 Nut 125 Hand wheel 86 Shaft 126 Hand wheel 2 87 Screw M5X12 127 Knob cover 88 Dead plate 128 Leg 89 Bearing 608 129 Wheel frame 90 Output shaft 130 Rubber foot 91 Front cover 131 Screw 6X12 92 Bearing 6201 132 Screw 6X12 93 Gear box 133 Short guide rail 94 Big nut 134 Nut 95 Screw ST5X55 135 Long guide rail 96 Stator 135 Long guide rail 98 Fan 14 Nut 99 Fan 14 Searing 6202 99 Fan 14 Back cover 100 Bearing 6200 14 14 14 101 Body 14 14 14 14 102 Brush holder	\vdash			
86 Shaft 126 Hand wheel 2 87 Screw M5X12 127 Knob cover 88 Dead plate 128 Leg 89 Bearing 608 129 Wheel frame 90 Output shaft 130 Rubber foot 91 Front cover 131 Screw K12 92 Bearing 6201 132 Screw K12 93 Gear box 133 Short guide rail 94 Big nut 134 Nut 95 Screw ST\$X55 136 Long guide rail 96 Stator 9 Bearing 6202 98 Fan 1 Long guide rail 99 Rotor 1 1 Long guide rail 100 Bearing 6202 1	84	Long shim	124	Plastic gear
127 Screw M5X12 127 Knob cover	85		125	Hand wheel
88 Dead plate 128 Leg 89 Bearing 608 129 Wheel frame 90 Output shaft 130 Rubber foot 91 Front cover 131 Screw 6X12 92 Bearing 6201 132 Screw 6X12 93 Gear box 133 Short guide rail 94 Big nut 134 Nut 95 Screw ST5X55 135 Long guide rail 96 Stator 13 Long guide rail 97 Bearing 6202 14 14 98 Fan 14 14 99 Rotor 14 14 100 Bearing 6200 14 14 101 Body 14 14 102 Brush holder 14 14 103 Back cover 14 14 104 Screw ST4X16 14 105 Screw ST4X20 14 106 Carbon brush 15 <td>86</td> <td>Shaft</td> <td>126</td> <td>Hand wheel 2</td>	86	Shaft	126	Hand wheel 2
88 Bearing 608 129 Wheel frame 90 Output shaft 130 Rubber foot 91 Front cover 131 Screw 6X12 92 Bearing 6201 132 Screw 6X12 93 Gear box 133 Short guide rail 94 Big nut 134 Nut 95 Scrow ST5X55 135 Long guide rail 96 Stator Stator 97 Bearing 6202 Bearing 6202 98 Fan Pan 99 Rotor Pan 100 Bearing 6200 Pan 101 Body Pan 102 Brush holder Pan 103 Back cover Pan 104 Screw ST4X16 Pan 105 Screw Tod Pan 106 Carbon brush Pan 107 Screw ST4X20 Pan 110 Screw M5X12 Pan 111 Hand wheel washer	87	Screw M5X12	127	Knob cover
90	88	Dead plate	128	Leg
91 Front cover 131 Screw 6X12 92 Bearing 6201 132 Screw 6X12 93 Gear box 133 Short guide rail 94 Big nut 134 Nut 95 Screw ST6X55 135 Long guide rail 96 Stator 1 97 Bearing 6202 1 98 Fan 1 100 Bearing 6200 1 101 Body 1 102 Brush holder 1 103 Back cover 1 104 Screw ST4X16 1 105 Screw rod 1 106 Carbon brush 1 107 Screw ST4X20 1 110 Screw ST4X20 1 111 Hand wheel washer 1 112 Screw M5X12 1 113 Hand wheel base 1 114 Screw M5X12 1 115 Pointe	89	Bearing 608	129	Wheel frame
92 Bearing 6201 132 Screw 6X12 93 Gear box 133 Short guide rail 94 Big nut 134 Nut 95 Screw ST5X55 135 Long guide rail 96 Stator 135 Long guide rail 97 Bearing 6202 14 14 98 Fan 14 14 99 Rotor 15 15 100 Bearing 6200 16 16 101 Body 17 16 102 Brush holder 17 16 103 Back cover 17 16 104 Screw ST4X16 17 17 105 Screw ST4X20 17 17 106 Carbon brush 17 18 107 Screw M5X12 17 18 110 Screw M5X12 17 18 111 Hand wheel base 11 18 18 110	90	Output shaft	130	Rubber foot
93 Gear box 133 Short guide rail 94 Big nut 134 Nut 95 Screw ST5X65 135 Long guide rail 96 Stator 99 Rotor 97 Bearing 6202 98 Fan 99 Rotor 99 Rotor 100 Bearing 6200 90 90 101 Body 90 90 90 102 Brush holder 90	91	Front cover	131	Screw 6X12
94 Big nut 134 Nut 95 Screw ST5X55 135 Long guide rail 96 Stator 97 Bearing 6202 98 Fan 99 Rotor 99 Rotor 99 Rotor 90	92	Bearing 6201	132	Screw 6X12
95 Screw ST5X55 135 Long guide rail 96 Stator 97 Bearing 6202 98 Fan 99 Rotor 99 Rotor 99 Rotor 99 Rotor 99 Rotor 90	93	Gear box	133	Short guide rail
96	94	Big nut	134	Nut
97 Bearing 6202 98 Fan 99 Rotor 100 Bearing 6200 101 Body 102 Brush holder 103 Back cover 104 Screw ST4X16 105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 110 Screw M5X12 111 Adjusting and locking grip 119 Screw M5X12	95	Screw ST5X55	135	Long guide rail
98 Fan 99 Rotor 100 Bearing 6200 101 Body 102 Brush holder 103 Back cover 104 Screw ST4X16 105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	96	Stator		
99 Rotor 100 Bearing 6200 101 Body 102 Brush holder 103 Back cover 104 Screw ST4X16 105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw M5X12 120 Screw M5X12 120 Screw M5X12	97	Bearing 6202		
100 Bearing 6200 101 Body 102 Brush holder 103 Back cover 104 Screw ST4X16 105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw ST4X20	98	Fan		
101 Body 102 Brush holder 103 Back cover 104 Screw ST4X16 105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw SX12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw M5X12 120 Screw M5X12 120 Screw M5X12 131 Adjusting and locking grip 148 Adjusting and locking grip 150 Screw M5X12 150 Screw M5X12 151 Screw M5X12 151 Screw M5X12 152 Screw M5X12 153 Screw M5X12 154 Screw M5X12 155 Screw M5X12 156 Screw M5X12 157 Screw M5X12 158 Screw M5X12 159 Screw M5X12 150 Screw	99	Rotor		
102 Brush holder	100	Bearing 6200		
103 Back cover 104 Screw ST4X16 105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	101	Body		
104 Screw ST4X16 105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	102	Brush holder		
105 Screw rod 106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	103	Back cover		
106 Carbon brush 107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	104	Screw ST4X16		
107 Screw ST4X20 108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	105	Screw rod		
108 Angle gear 109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	106	Carbon brush		
109 M5 nut 110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	107	Screw ST4X20		
110 Screw 5X12 111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	108	Angle gear		
111 Hand wheel washer 112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	109	M5 nut		
112 Screw M5X12 113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	110	Screw 5X12		
113 Hand wheel base 114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	111	Hand wheel washer		
114 Screw M5X12 115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	112	Screw M5X12		
115 Pointer 116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	113	Hand wheel base		
116 Point base 117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	114	Screw M5X12		
117 Spring 118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	115	Pointer		
118 Adjusting and locking grip 119 Screw M5X12 120 Screw ST4X20	116	Point base		
119 Screw M5X12 120 Screw ST4X20	117	Spring		
119 Screw M5X12 120 Screw ST4X20	118	Adjusting and locking grip		
120 Screw ST4X20	119			
121 Hand wheel rod	120	Screw ST4X20		
	121	Hand wheel rod		