


HAND TOOLS & MECHANIC TOOLS

Universal strut spring compressor

ชุดเครื่องมือถอดสปริงแบบขาทำมุม

FORCE ฟอर्स

- This tool fits a wide range of struts without the inconvenience of special adaptor shoes.
- Tool compresses springs of 4" to 8" OD, with wire diameters of 7/16" to 11/16". Works both by hand or impact wrench.
- The jaws of the compressor are held in place by safety locking pins.
- Use most of spring compressor quickly and easily on the bench or on the vehicle.




KT Code	Model	Weight (g)	Price
F131-62702	62702	9350	

CV Boot clamp pliers

คีมย้ำหัวเข็มขัด รัศยางค์บูทเพลลา (สายรัศแบบไม่มีหู)

FORCE ฟอर्स

A sturdy tool, works on earless-type clamps including those found on GM inboard CV joint.




KT Code	Model	Weight (g)	Price
F131-62519	62519	320	

39pc Turnbuckle for shock absorber's top lid

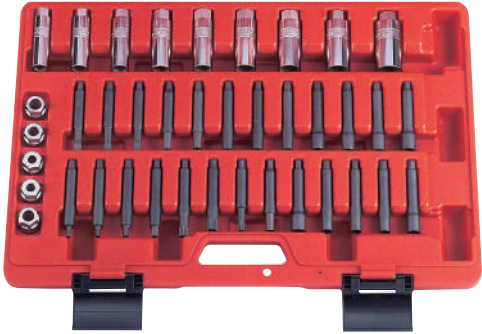

ชุดข้อต่อจับแกนโช๊คอัพ 39 ชิ้น

FORCE ฟอर्स

- The complete sizes for using of most kinds of cars.

Contents:

- 5pc external sockets 10.5, 12.5, 14, 14.5(14.5x5), 14.5(14.5x3)mm
- 9pc external sockets 14, 16, 17, 18, 19, 21, 22, 24, 27mm
- 9pc central sockets 4, 5.2, 6, 6.3, 7, 8, 9, 10, 12mm
- 2pc central sockets 5, 10mm
- 4pc central sockets 8, 9, 10, 11mm
- 4pc central sockets 5, 6, 7, 8mm
- 3pc central sockets 3, 3.5, 4mm
- 1pc central socket M12
- 2pc central sockets T50, T60

• Apply to : VW, AUDI, M-BENZ, AUSTIN MAESTRO, HONDA, NISSAN, SEAT, FIAT, FORD, ROVER, OPEL, PEUGEOT, RENAULT, CITROEN, TOYOTA, CHRYSLER, BMW, VOLVO.



KT Code	Model	Weight (g)	Price
F131-939T1	939T1	6250	

CV Joint boot clamp pliers

คีมย้ำหัวเข็มขัด รัศยางค์บูทเพลลา (สายรัศชนิดมีหู)

FORCE ฟอर्स

For ear type clamps, fits late model GM CV joint boots, also installs PERMA-QUICK type clamps quickly and easily use for filter, cooling system and vacuum lines.

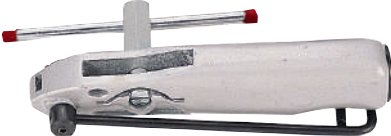


KT Code	Model	Weight (g)	Price
F131-62520	62520	380	

CV Dust boot clamp installer with cutter

ตัวรัศเหล็กรัศยางค์บูทเพลลา พร้อมคัตเตอร์

FORCE ฟอर्स

- Use 1/2" socket wrench to wind and crimp by hand tool is easily disengaged from the band after the band is tightened.
- Cut off easily with built in cutting arm without any other tool.

KT Code	Model	Weight (g)	Price
F131-62521	62521	510	